




SECTION A-A

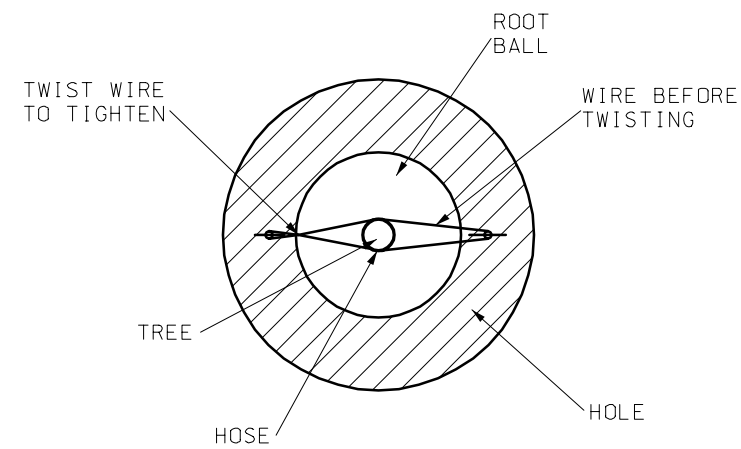

SECTION B-B

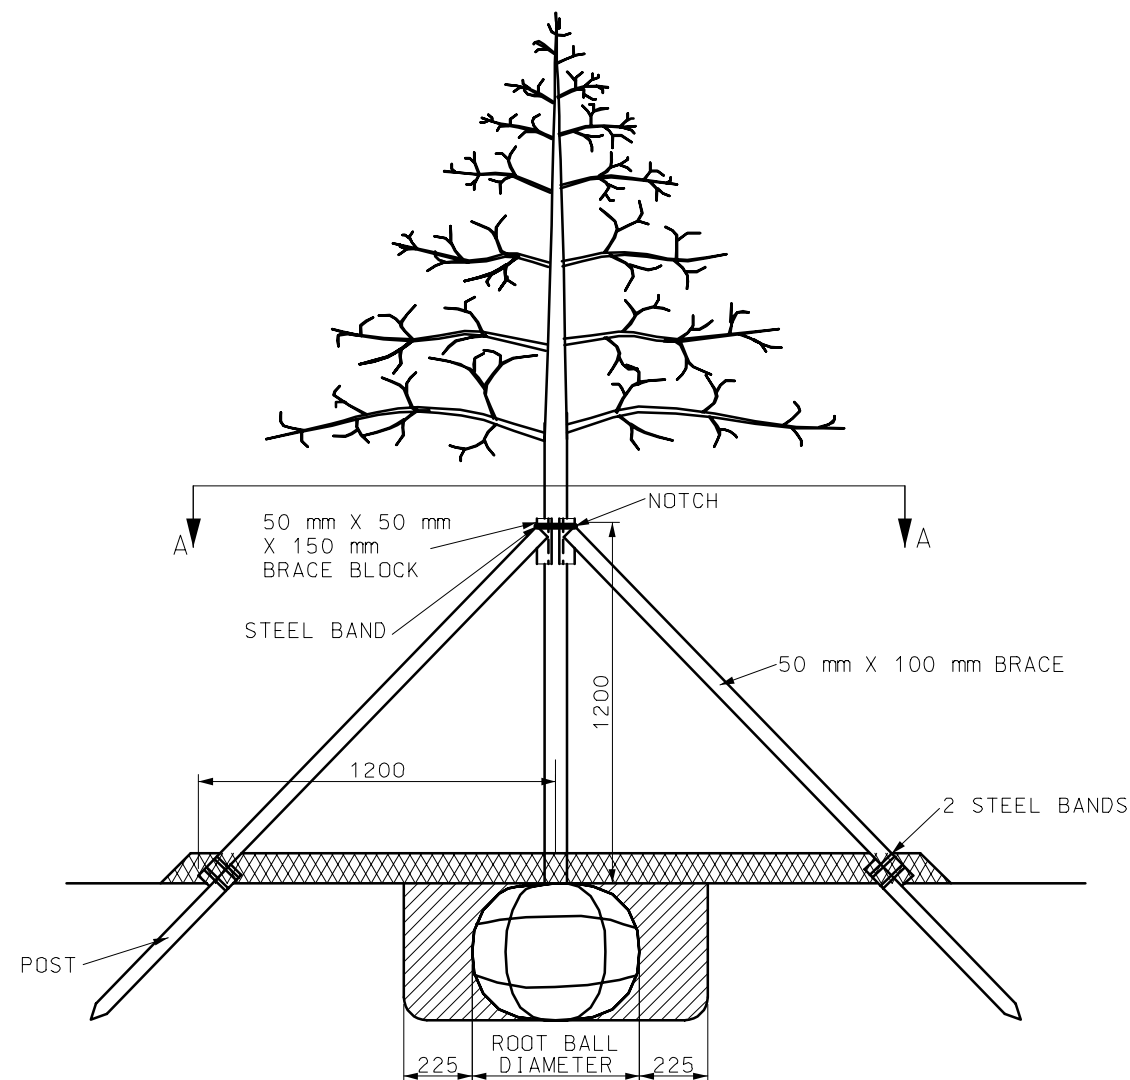

METHOD OF SUPPORTING DECIDUOUS TREES
75 mm CALIBER OR LARGER

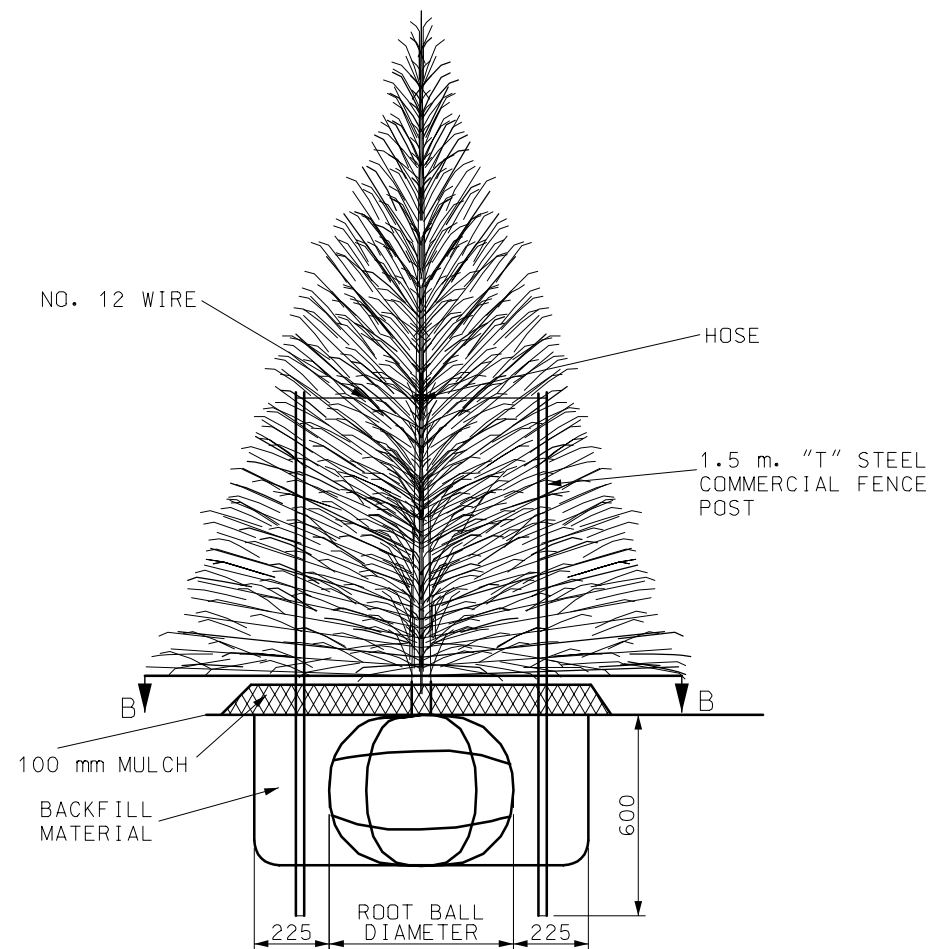

METHOD OF SUPPORTING EVERGREEN TREES
900 mm OR MORE IN HEIGHT

NOTES:

TREE WRAP SHALL BE INSTALLED BEFORE BRACING.
BRACE SHALL BE NAILED SECURELY TO POST AND BRACE BLOCK.

BANDING SHALL BE DONE WITH A COMMERCIAL BANDING MACHINE.

GENERAL NOTES:

ALL DIMENSIONS SHOWN ARE IN mm UNLESS OTHERWISE NOTED.

ALL NUMBER MEASUREMENTS ARE NOMINAL.

MISSOURI HIGHWAYS AND TRANSPORTATION
COMMISSION


TYPICAL PLANTING
ILLUSTRATIONS
METHOD OF SUPPORT

DATE: _____


EFFECTIVE: 07-01-2004

M808.00

1
3

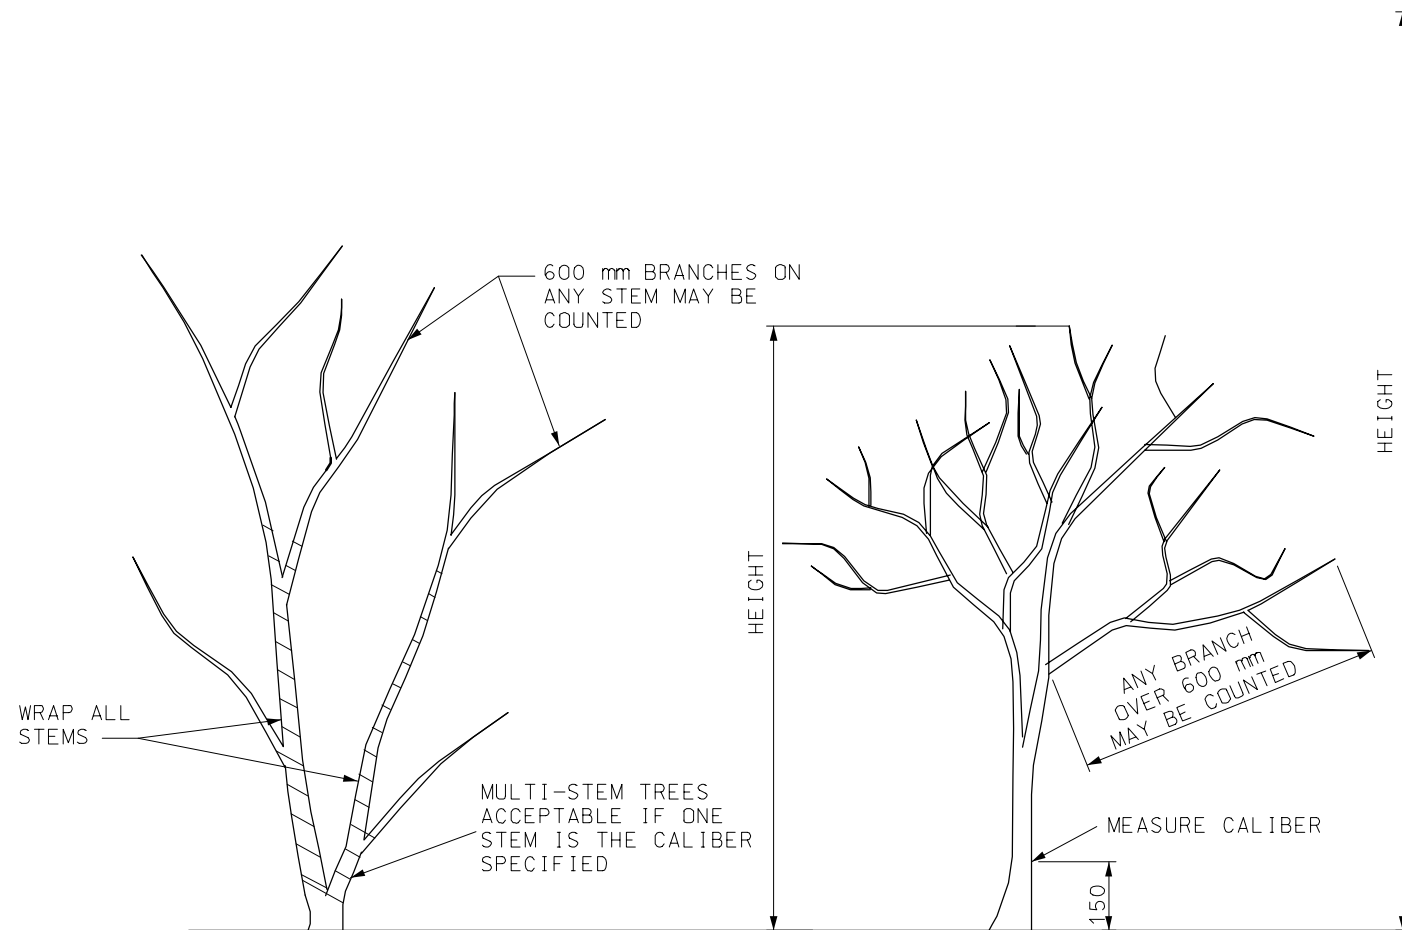


**MEASUREMENT OF
SMALL TREES**

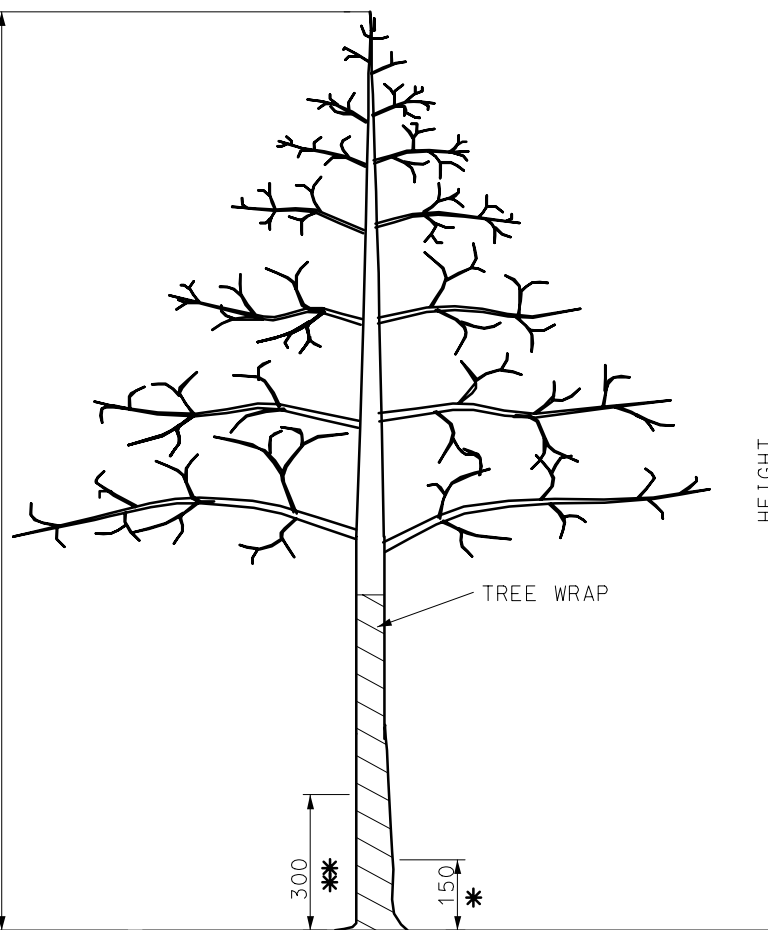


* MEASURE CALIBER FOR
TREES 100 mm OR LESS.
** MEASURE CALIBER
FOR TREES MORE
THAN 100 mm.



**MEASUREMENT OF
LARGE TREES**

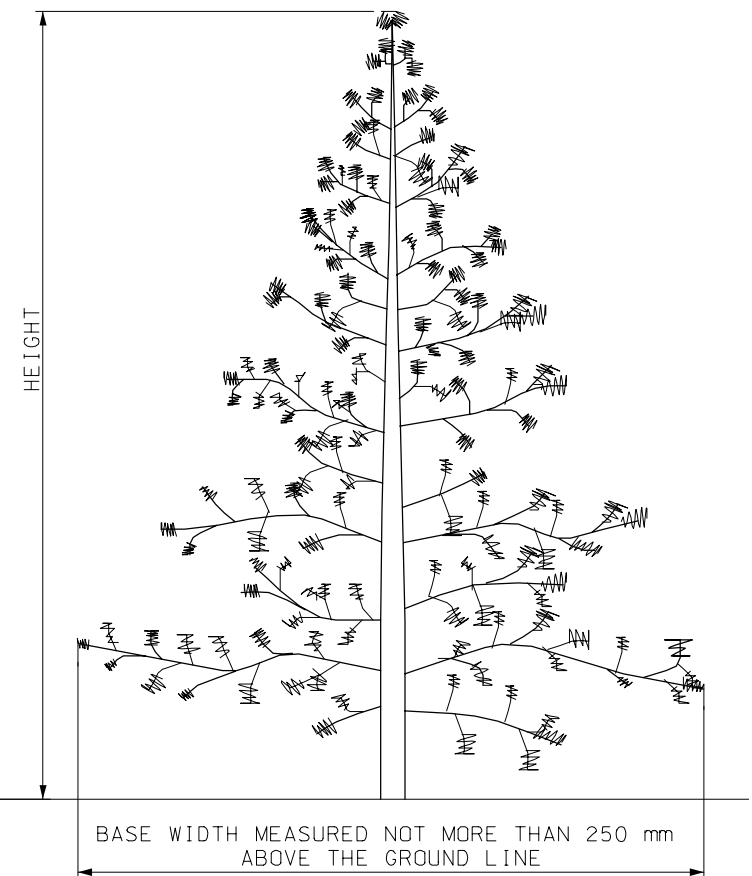

**MEASUREMENT OF
EVERGREEN TREES**


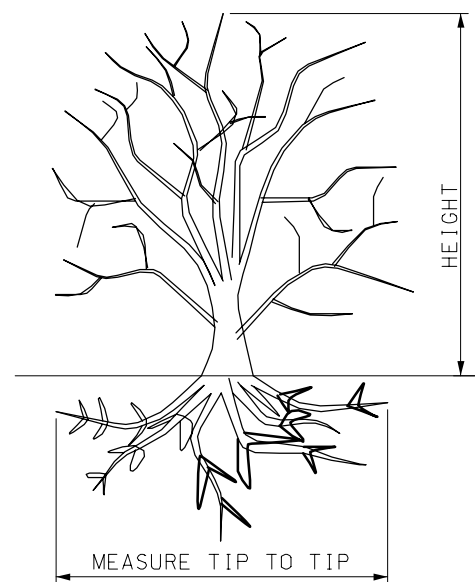


**MEASUREMENT OF
DECIDUOUS SHRUBS**

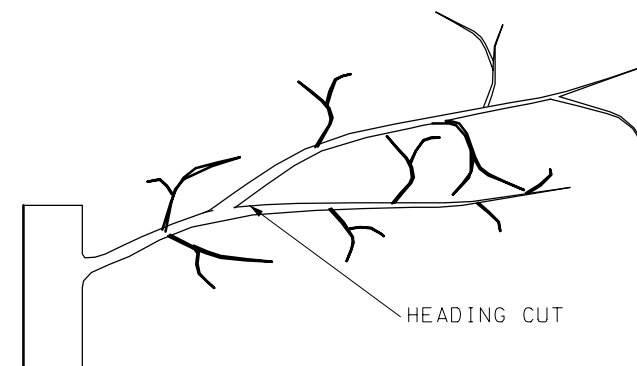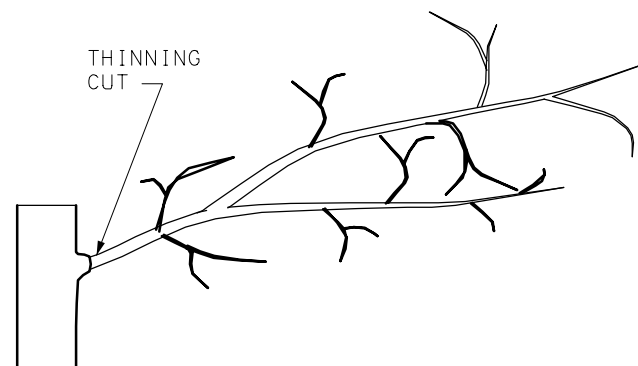


PRUNING CUTS


MISSOURI HIGHWAYS AND TRANSPORTATION COMMISSION			
TYPICAL PLANTING ILLUSTRATIONS MEASUREMENT AND PRUNING CUTS			
DATE: _____	EFFECTIVE: 07-01-2004	M808.00	<div>2</div> <div>3</div>

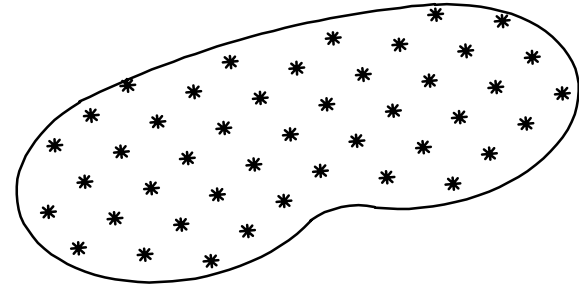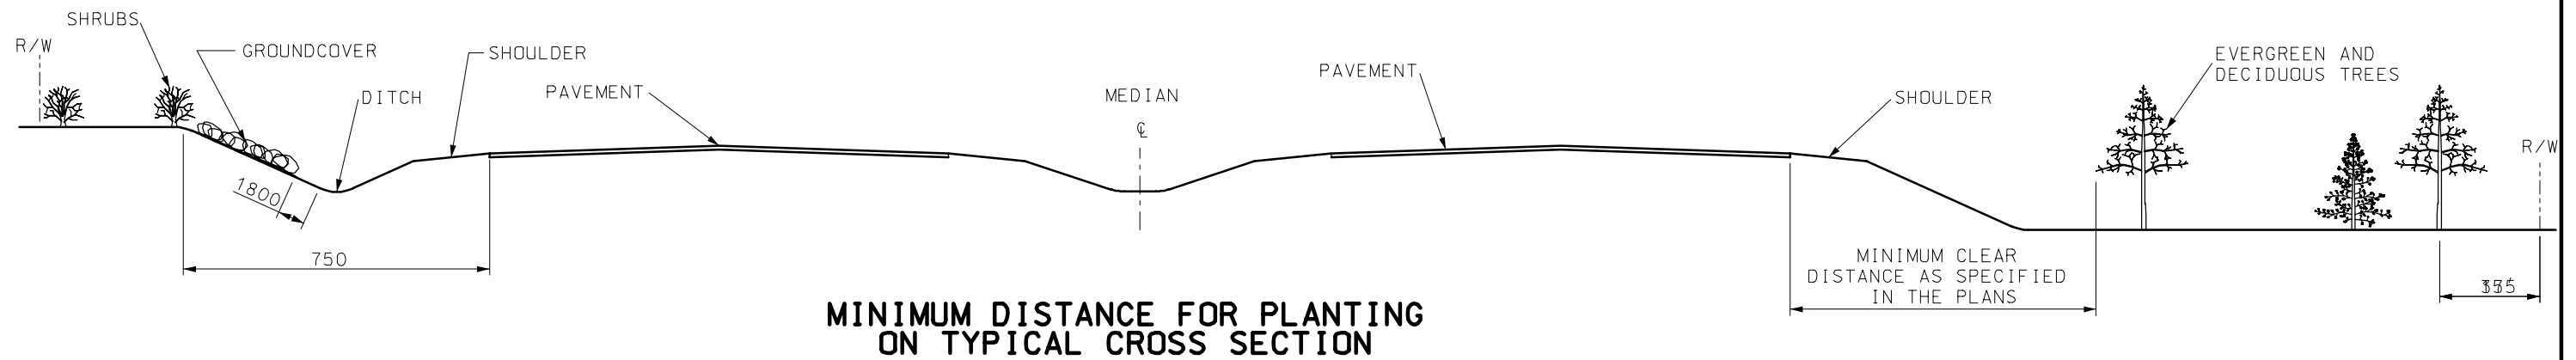


LOCATION OF SHRUBS IN A TYPICAL PLANT BED

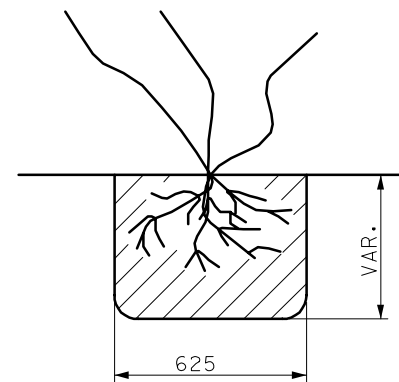

VINES AND SEEDLINGS

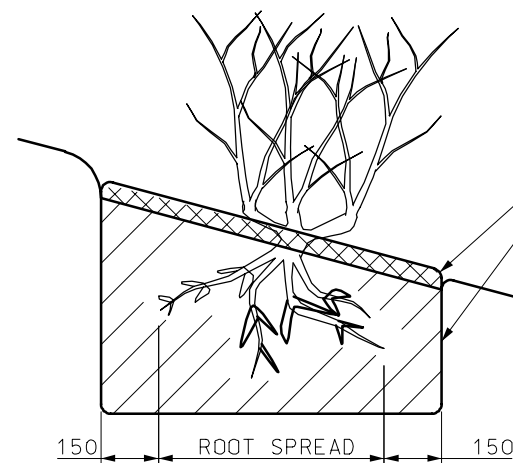

DECIDUOUS SHRUB SLOPE PLANTING

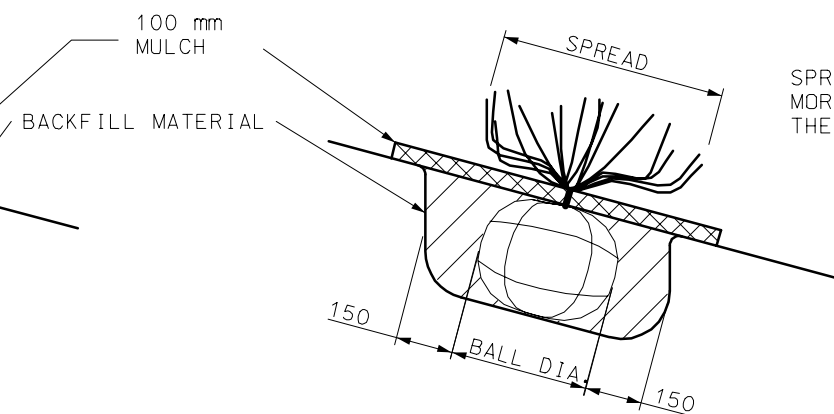

EVERGREEN SHRUB SLOPE PLANTING

SPREAD MEASURED NO MORE THAN 650 mm ABOVE THE GROUND LINE.

MISSOURI HIGHWAYS AND TRANSPORTATION COMMISSION			
TYPICAL PLANTING ILLUSTRATIONS LOCATION AND SLOPE PLANTING			
DATE: _____	EFFECTIVE: 07-01-2004	M808.00	3/3